

Comfort functions


Clock

時刻設定

時 分

セット

- Current time can be set.
- When to start savingpower can be timer controlled.

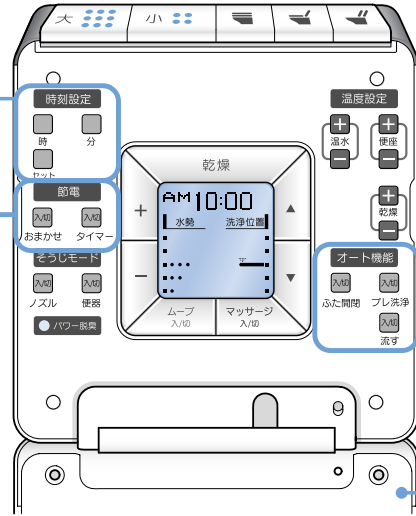

Auto functions

入切 プレ洗浄

Sit down on the seat, and a small amount of water starts flowing to keep the inside of the bowl wet and clean. (On D2 only)

入切 流す

When you leave the seat, the toilet is flushed automatically.

入切 ふたの開閉

The sensor senses a person for the lid open and close itself. (On D2 only)

illust:D2
cover

POWER SAVE

入切 おまかせ

Hours which the toilet is least used are memorized. The seat temperature is automatically kept low during these hours to save power.

For super memory power saving

During the time when the toilet is not used with memory power saving being ON, the toilet seat heater is automatically turned ON for power saving.

1 Press this switch. **finish** Setting of memory power saving ends.

2 Press this switch again. **finish** Setting of super memory power saving ends.

おまかせ

スーパーおまかせ

入切 タイマー

Once preset, the seat heater turn off at the preset hour everyday to save power. (You can choose from power save hours 3, 6 or 9.)

Example

For power save for 6 hours (1:00 - 7:00am).

1 **Set the power save time.**
● Select "6H" for power save hours.

2 **Set the start time.**
● Set power save start time to "AM 1:00".

finish The timer starts saving power at the preset time.

時刻設定

時 分

セット

タイマー

AM 10:00

開始時刻

TOTO

WASHLET NEOREST D1/D2

●This sheet can be hung on the wall by hooks supplied with the product.

HOW TO USE

Flushing

Stool **Urine**

大 小

The toilet can be flushed with the remote controller.

In case of power failure

Remove the panel at the right and turn the Bowl clean-up knob to flush the toilet.

When the remote controller battery has run down

Flush out switch

連転 流す

Panel

① Turn away and longer than 2 seconds.
② After flushing, turn back.

Open and close the seat and lid (On D2 only)

- To close both the seat and lid.
- To open the lid and close the seat.
- To open both the seat and lid.

Stopping


止

To stop washing and drying.

Drying

乾燥

To blow warm air and dry refreshed.

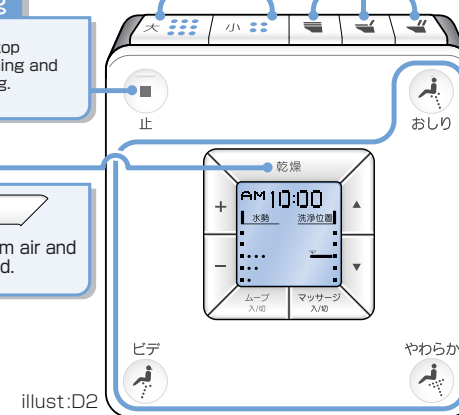

illust:D2

Washing

おしり やわらか ビデ

To wash the bottom. To wash the bottom with mild spray. For ladies.

Adjustment of water squirting force and washing position

Water squirting force adjusting switch

Washing position adjusting switch

Comfortable washing

ムーブ 入切

マッサージ 入切

The nozzle moves back and forth during washing. Water pressure changes for washing the bottom.

TEMP ADJUST · Extra deodorizing

Open the cover for use. (illust:D2)

Open the cover.

TEMP ADJUST

温度設定

温水 便座

乾燥

Extra deodorizing

●ノパワー脱臭 Suction force is increased for extra deodorizing.

cover

Main control panel

連転 流す ビデ おしり

入切 大 入切 入切

※Use these buttons if the batteries of the remote control are dead.

◆ Washlet is TOTO's registered trademark.