

Comfort functions

Auto functions

- **丸洗淨** Sit down on the seat, and a small amount of water starts flowing to keep the inside of the bowl wet and clean.
- **流す** When you leave the seat, the toilet is flushed automatically.
- **ふた開閉** The sensor senses a person for the lid to open and close itself.



illust:D2

POWER SAVE

- **タイマー** Once preset, the seat heater turn off at the preset hour everyday to save power. (You can choose from power save hours 3, 6 or 9.)

Example For Power save for 6 hours (1:00-7:00am).

● **タイマー** Press POWER SAVE [ON/OFF] at a desired power-save start hour (1:00am).

● **タイマー** Select the power-saving time "6".

finish
Timer power save starting.

- **おまかせ** Hours in which the toilet is least used are memorized. The seat temperature is automatically kept low during these hours to save power.

● **おまかせ** Press this switch

finish
Memory power save starting.

TOTO

WASHLET NEOREST D1/D2

● This sheet can be hung on the wall by hooks supplied with the product.


HOW TO USE

Flushing

- **<Stool>** 大
- **<Urine>** 小

The toilet can be flushed with the remote controller.

- When the remote controller battery has run down.

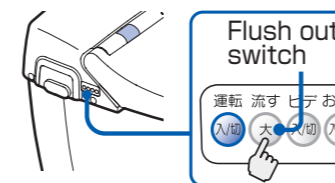

- In case of power failure. Remove the panel at the right and turn the Bowl clean-up knob to flush the toilet.

Bowl clean-up knob

- Turn away and longer than 2 seconds.
- After flushing, turn back.

Panel

Stopping

- **止** To stop washing and drying.

Extra deodorizing

- **力-強** Suction force is increased for extra deodorizing.

Drying

- **乾燥** To blow warm air and dry refreshed.

Washing

- **おしり** To wash the bottom.
- **やわらか** To wash the bottom with mild spray.
- **ビデ** For ladies.

Comfortable washing

- **ムーブ** The nozzle moves back and forth during washing.
- **マッサージ** Water pressure changes for washing the bottom.

Open and close the seat and lid

- **閉** To close both the seat and lid.
- **開** To open the lid and close the seat.
- **開** To open both the seat and lid.

- Water pressure and wash position are adjusted.

※ Standard wash force and position are resumed each time the bottom, gentle or bidet button is pressed.

TEMP ADJUST

Unhook the remote controller for use.

Press the temperature selector and use the temperature adjuster.

Back of the remote controller (illust:D2)



Temperature adjustor Temperature selector

Main control panel



※ Use these buttons if the batteries of the remote control are dead.