

HOW TO USE

○ This sheet can be hung on the wall with use of the attached hook.

Washing

おしり



To wash the bottom.

やわらか



To wash the bottom with mild spray.

ピデ



For ladies.

Comfortable washing


おしり やわらか ピデ

① Press the switch you want to use.

② Press the same switch once again.

The nozzle moves back and forth during washing.

③ Press the same switch one more time. (Move wash stops.)

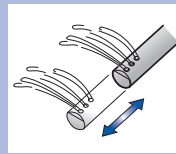

● Water pressure are adjusted.



Flush the toilet

(on S1A·S2A only)

<Stool>

<Urine>

大

流す

小

Drying

(on S2·S2A only)

乾燥

To blow warm air and dry refreshed.

Stopping

止




To stop washing and drying.

Extra deodorizing

パワー脱臭

入切


Suction force is increased for extra deodorizing.

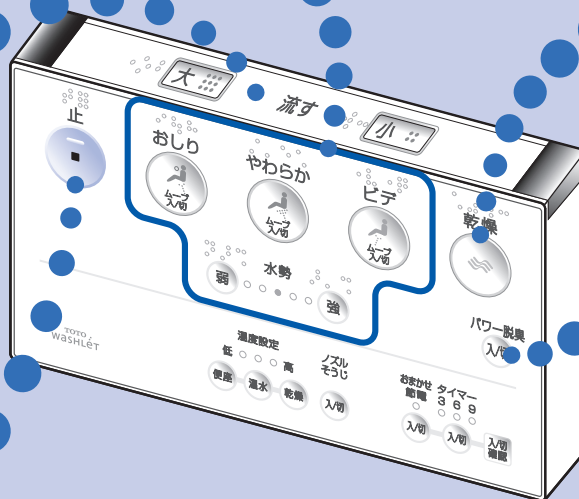

(illust: S2A)

TEMP ADJUST

The temperature can be adjusted by the temperature adjustment switch on the remote control.

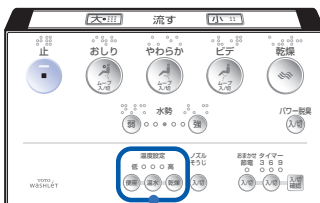


便座 温水 乾燥 It can be adjusted to 3 levels, changing each time one of the switches is pressed. (乾燥 : on S2·S2A only)

The lamp goes out when the switch is "OFF".

(Drying can not be stopped by the temperature adjustment switch.)



Main control panel

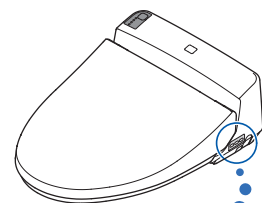

※ Use this panel when the remote control battery is expired.