

# Standard Use

Press a button on the remote control; a beep sounds when the top unit receives the signal.

## Washing

For washing rear using mild water pressure.

Cleanses your front (for ladies).


Wide bidet washes your rear thoroughly and quickly using mild water pressure.

## Drying

Dries wet parts using warm air.

## Stopping

Stops the operation.

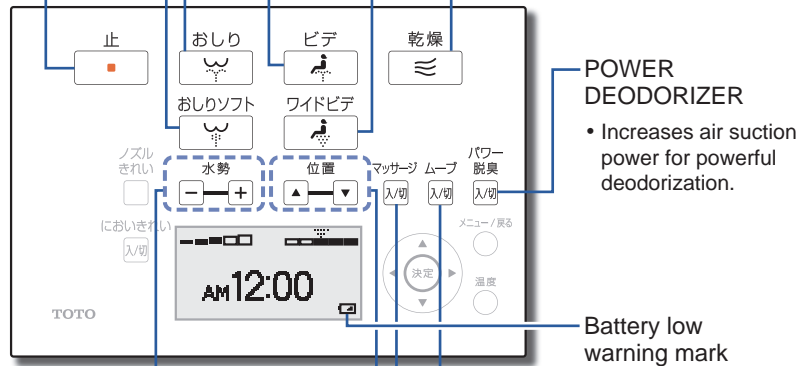

**POWER DEODORIZER**  
• Increases air suction power for powerful deodorization.

Battery low warning mark


●The function that can be used when you press the “REAR”, “SOFT REAR”, “BIDET” or “WIDE BIDET” button during use.

**■WATER PRESSURE ADJUSTMENT (5 steps.)**  
Water pressure display (Weak - Strong)

**■WASH POSITION ADJUSTMENT (5 steps.)**  
Washing position display (Front - Rear)

**■OSCILLATING**  
The wand moves back and forth to wash your rear thoroughly.

**■MASSAGE**  
Washes with the water pressure pulsating between soft and strong.

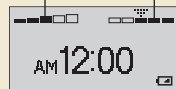

## Flushing

Full flush

Half flush

A small volume of water is used to flush the toilet bowl clean.  
• Use this if the toilet paper is not flushed away.

## Opening and closing

Opens and closes the toilet seat.


Toilet lid opens and closes.




**WAND CLEAN**  
• The wand is cleaned with clean sterilized water.

**AIR DEODORIZER**  
• It eliminates disagreeable odors when you enter the bathroom.

<With AH/RH>  
■You can flush the toilet bowl using the manual lever (for toilet bowl flushing in power failure) during power failure.

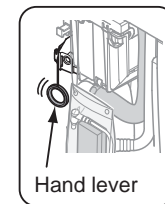

■The toilet bowl can also be flushed clean using the buttons on the left side of the Washlet.

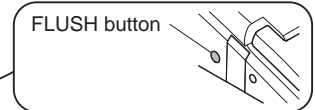


More comfortable! More Energy-Savings!

# How to Use

List of menus that can be set by remote control.

The setting menus and their number differ according to the model.

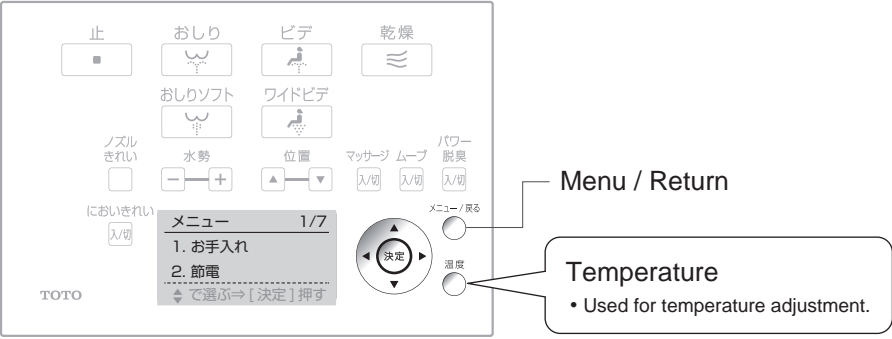

You can set as desired

If you want to return to the previous item, press the button.

## How to set

**1** Press .  
• The display screen changes.

**2** Set the item from the display screen.

- When you move the buttons (Up/Down), the frame of the item moves.
- When you move the buttons (Right/Left), you can select "Enter".
- When you press the button, the item is entered.

Number of menus on the display screen

メニュー	1/7
1. お手入れ	
2. 節電	
3. オート機能	
4. においきれい	
5. 室温	
6. 時刻設定	
7. その他設定	

◆で選ぶ⇒ [決定] 押す

