

Standard Use

◆“WASHLET” is a registered trademark of TOTO LTD.

Operate the controls on the remote control; a beep sounds when the main unit receives the signal.

Washing

For washing rear using mild water pressure.

Washes your rear.

Serves as a bidet for ladies.

Oscillating washing


- If you press the button again during use, the wand moves back and forth so that you can wash your rear thoroughly.

Drying

Dries your rear.

Stopping

Stops rear washing and other operating functions.

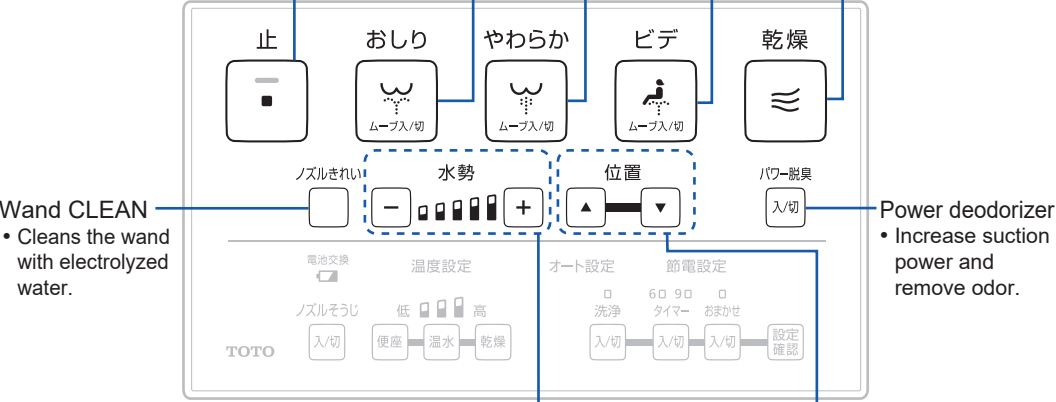

●Function that operates when a button is pressed while using "Rear", "Soft" or "Front".

■Water pressure adjustment (5 levels)

- After you press the "Water pressure adjustment" button, the set position will light for 10 seconds.
- If you press a wash button (Rear, Soft or Front), the lamp lights for about 10 seconds at the preset position.

水勢 (Water Pressure) - +

■Wand position adjustment (5 levels)

- Once use of the remote control is finished, the settings will return to the initial setting (3rd position) after a while.

水勢 (Water Pressure) - +

Flushing

Performs a full flush.

Performs a light flush.

A small volume of water is used to flush the toilet bowl clean.

- Use this if the toilet paper is not flushed away.

■Flush

The kind of button differs according to the type of toilet bowl and tank.

Full flush, Light flush, eco light flush

Full flush, Light flush only

Full flush only

No flushing function.

流す大 (Full Flush)

流す小 (Light Flush)

eco小 (Eco Light Flush)

止 (Stop)

おしり (Rear) ムーブ入/切

やわらか (Soft) ムーブ入/切

ビデ (Front) ムーブ入/切

乾燥 (Dry)

ノズルきれい (Nozzle Clean)

水勢 (Water Pressure) - +

位置 (Position) ▲ ▼

パワー脱臭 (Power Deodorizer) 入/切

電池交換 (Battery Replacement)

温度設定 (Temperature Setting) 低 中 高

オート設定 (Auto Setting) 洗浄 (Clean) 60 90 タイマー (Timer) おまかせ (Default)

節電設定 (Energy Saving Setting) 入/切

設定確認 (Setting Confirmation)

TOTO

ノズルそうじ (Nozzle Cleaning) 入/切

便座 (Seat) 温水 (Warm Water) 乾燥 (Dry)

Low Battery warning mark

Setting confirmation


- The current settings can be checked from the LED.

More comfortable! More Energy saver!

How to Use

Temperature Adjustment

Temperature can be changed to "Warm Water", "Toilet Seat" and "Warm Air" (only models equipped with warm air dryer)

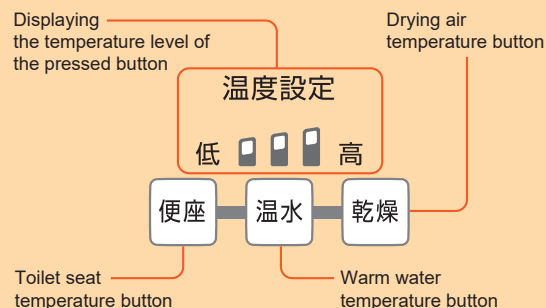


① 便座 温水 乾燥

Choose and press the button of the temperature that you want to set.

② Press the button selected in step ① repeatedly until a desired temperature level illuminates.


温度設定

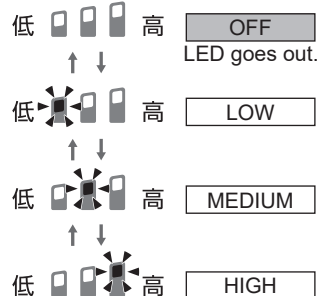

※The "Drying" cannot be turned "OFF".

If the button is not pressed for about 10 seconds, the temperature adjustment LED will go off, but the setting will be retained.

If the temperature adjustment LED goes out before the setting is completed, start all over again at step ①.

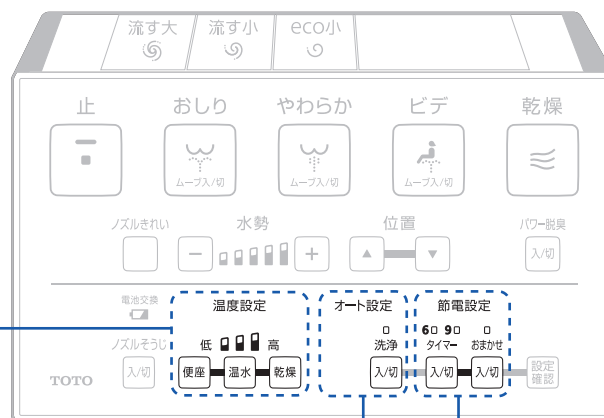

Auto flushing

(Available only when "Flush" button is located on the top side of the remote control.)

洗浄

入/切

The toilet flushes automatically when you stand up from the toilet seat.


Energy saver features

Auto energy saver

The product detects time periods with infrequent use and lowers the toilet seat temperature automatically.

- It takes about 10 days for the product to determine the periods when it is used relatively less frequently.

You can turn the feature ON/OFF at your discretion.

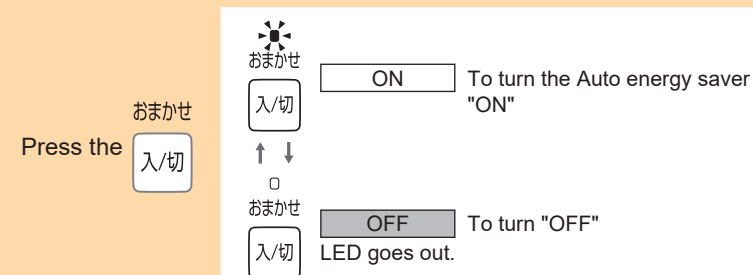

Timer energy saver

Once the time is set, the toilet seat heater turn off automatically during the set time period every day.

(The energy-saving time period can be set to 6 or 9 hours.)

Example When using energy-saving function for 6 hours (1 am - 7 am).

When the time (1 am) you want to start energy saving function is

reached, press the **タイマー** (Timer) button repeatedly until the "6" LED lights up.

タイマー
入/切

Setting completed

