

Standard Use

◆“Washlet” is a registered trademark of TOTO.

Press a button on the remote control; a beep sounds when the top unit receives the signal.

Washing

Washing the rear.

For washing rear using mild water pressure.

 
Serves as a bidet for ladies.

Wide bidet washes your rear thoroughly and quickly using mild water pressure.

*The feature toggles between “ON/OFF” each time the switch is pressed.

Stopping

Stops rear washing and other operating functions.

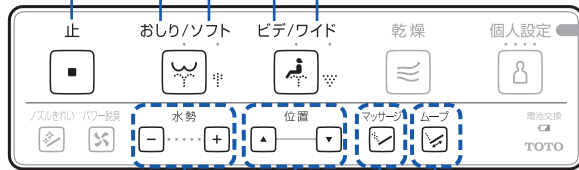

The function that can be used when you press the “REAR”, “SOFT”, “BIDET” or “WIDE” button during use.

WATER PRESSURE ADJUSTMENT (5 steps.)

If you press the water pressure adjustment button, the lamp lights for about 10 seconds at the preset position.



If you press a wash button (REAR, SOFT, BIDET or WIDE), the lamp lights for about 10 seconds at the preset position.



OSCILLATING

If you press the button again during use, the wand moves back and forth so that you can wash your rear thoroughly.

PULSATE

Washes with the water pressure pulsating between soft and strong.

WASH POSITION ADJUSTMENT (5 steps.)

The wand returns to the standard position (3rd step) each time the wash button (REAR, SOFT, BIDET or WIDE) is pressed.

Flushing

Full flush

Half flush

Opening and closing

Opens and closes the toilet seat.

Toilet lid opens and closes.

Drying

Dries wet parts using warm air.



Low Battery warning mark

AUTO WAND CLEANING

The wand is cleaned with clean sterilized water.

POWER DEODORIZE

Increases air suction power for powerful deodorization.

 
Personal setting lock

Up to four people can register their preferred “Water pressure”, “Wand position” and “Warm water temperature” settings.

To use


1. Press the button to turn on the LED for the location of your setting.
2. Press the wash button you want to use (such as buttocks wash.)

Personal setting lock




More comfortable! More Energy-Savings!

 How to Use

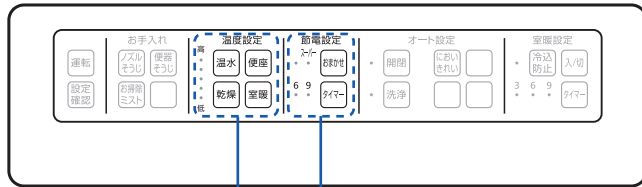

Temperature Adjustment

Temperature can be changed to "Warm Water", "Toilet Seat" and "Warm Air" (only models equipped with warm air dryer).


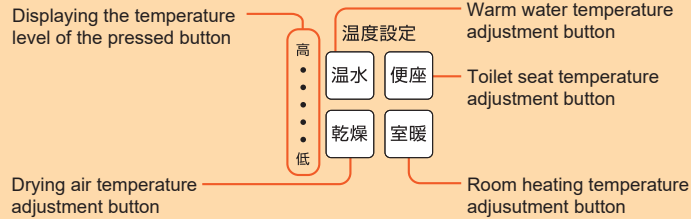


- 1 Press the button of the temperature you want to change.
- 2 Press the button selected in step 1 repeatedly until a desired temperature level lights up.

If the button is not pressed for about 10 seconds, the temperature adjustment LED will go off, but the setting will be retained.

If the temperature adjustment LED goes out before the setting is completed, start all over again at step 1.

The setting changes each time the button is pressed once

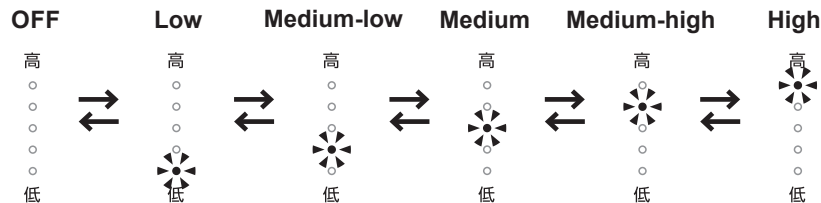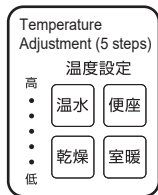

*There is no "OFF" setting for Drying air or Room Heating.


Energy-Saving Features

Auto energy saver+

The Washlet memorizes the time slot when the toilet is used less frequently and lowers the toilet seat temperature automatically to save energy.

*It takes approximately 10 days to determine the time slot where the toilet is used less frequently.

You can turn the feature ON/OFF at your discretion.

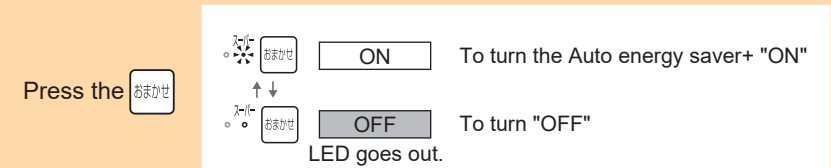

ENERGY-SAVING TIMER

Once set, the toilet seat heater turns off everyday at that time to save energy. (The energy-saving time period can be set to 6 or 9 hours.)

Example When using energy-saving function for 6 hours(1:00 - 7:00am).

When the time (1:00 am) you want to start energy saving function is reached, press the タイマー (Timer) button repeatedly until the "6" LED lights up.



What to Do?

If the water does not flow due to a power outage.

In the event of a power outage, you can flush the toilet bowl with the manual water supply cord (orange) and the manual water storage cord (white).

The toilet bowl can also be flushed clean by the FLUSHING button.

