

Standard Use

Press a button on the remote control; a beep sounds when the top unit receives the signal.

◆“Washlet” is a registered trademark of TOTO.

Washing

For washing rear using mild water pressure.

Cleanses your rear.

Cleanses your front (for ladies).

 
Wide bidet washes your rear thoroughly and quickly using mild water pressure.

Drying

Dries wet parts using warm air.

Stopping

Stops the operation.

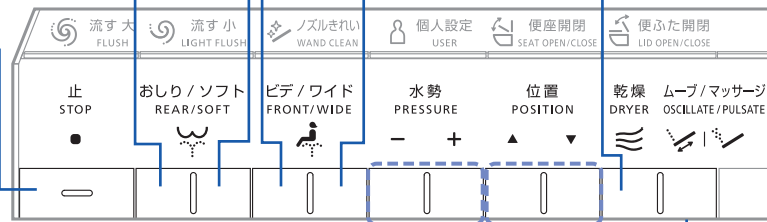

PRESSURE

You can adjust the water pressure to one of five levels. ("-": Softer, "+": Stronger)

*When you press the button to flush, the position returns to the standard position (3rd position).

POSITION

You can adjust the washing position to 5 different points between the front and the rear, using the "▲" and "▼" buttons.

OSCILLATE

The wand moves back and forth to wash your rear thoroughly.

PULSATE

Washes with the water pressure pulsating between soft and strong.



*The feature toggles between "ON/OFF" each time the switch is pressed.

The function that can be used when you press the "REAR", "SOFT", "BIDET" or "WIDE" button during use.

Flushing

Flush

 
Light flush

Opening and closing

Opens and closes the toilet seat.

Toilet lid opens and closes.

Low battery warning mark

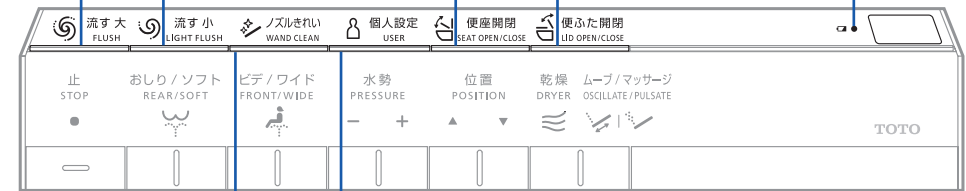

WAND CLEAN

The wand is cleaned with clean sterilized water.

Personal setting lock

Up to four people can register their preferred "Water pressure", "Wand position" and "Warm water temperature" settings.

To use

1. Press the button and select the registration number while checking the electronic sound.
2. Press the wash button you want to use (such as buttocks wash).

[REGISTER1] : One short beep
 [REGISTER2] : Two short beeps
 [REGISTER3] : Three short beeps
 [REGISTER4] : Four short beeps

 
More comfortable! More Energy-Savings!

How to Use

List of menus that can be set by remote control.

The setting menus and their number differ according to the model.

Remoto control back side

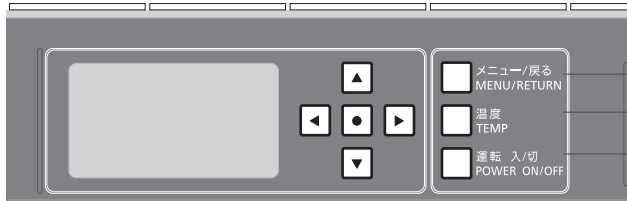

Menu / Return

Temperature

 
Used for temperature adjustment.

Power ON/OFF button

Press "Power ON/OFF" button about 3 seconds or longer.

How to set

1 Press MENU/戻る MENU/RETURN



The display screen changes.

2 Set the item from the display screen.

 
When you move the buttons (Up/Down), the frame of the item moves.

When you move the buttons (Right/Left), you can select "Enter".

When you press the button, the item is entered.


*The display goes out when no button on the remote control is pressed for about 60 sec or more.

Number of menus on the display screen.

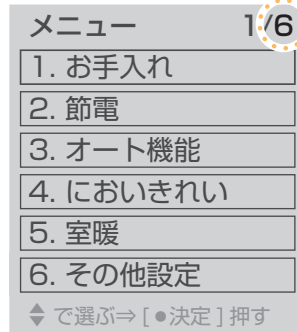

You can set as desired.

 If you want to return to the previous item, press the MENU/戻る MENU/RETURN button.


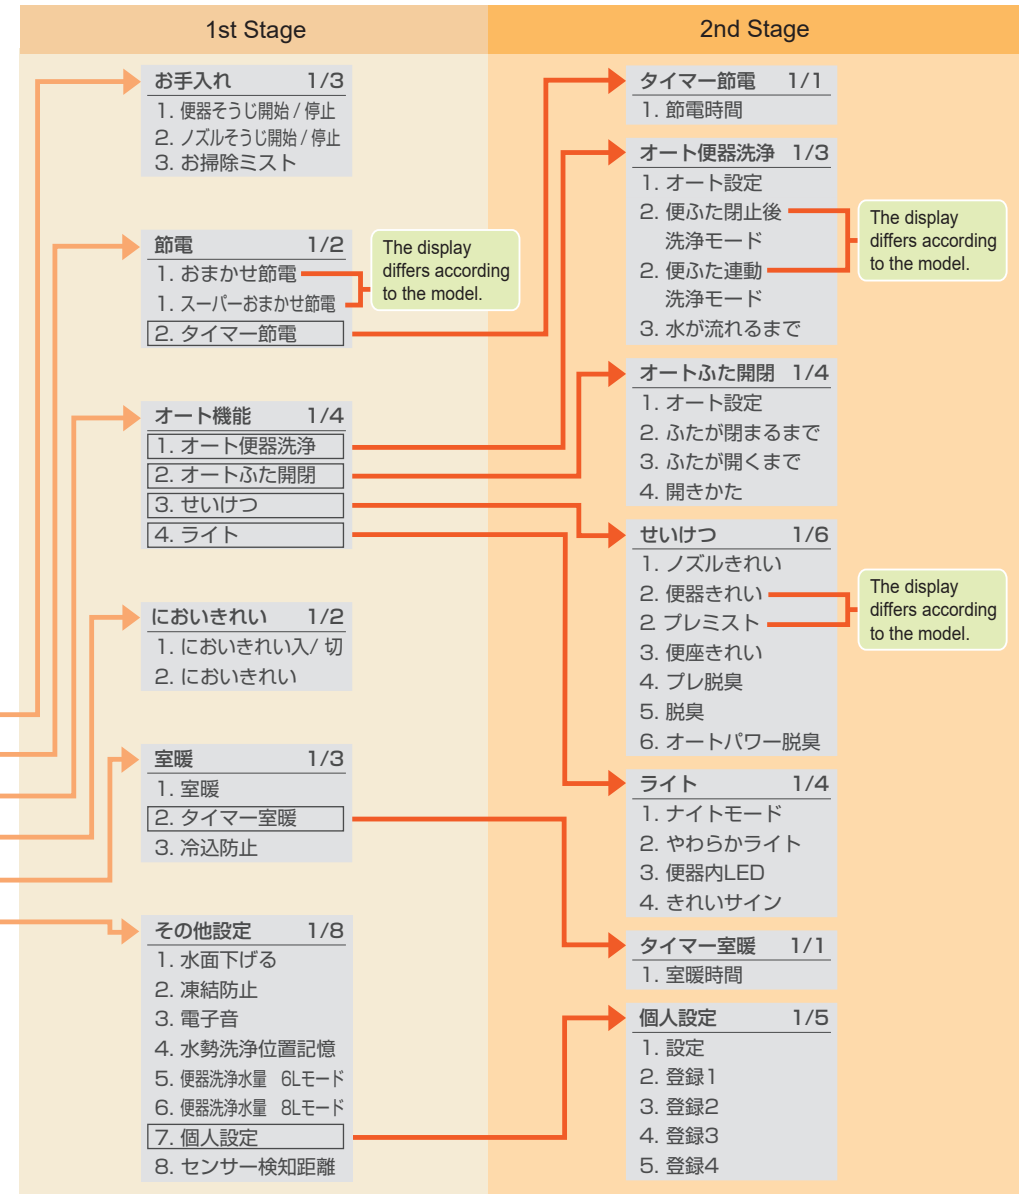


What to Do?

If the water does not flow due to a power outage.



You can flush the toilet bowl using the manual lever (for toilet bowl flushing in power failure) during power failure.

  With NX

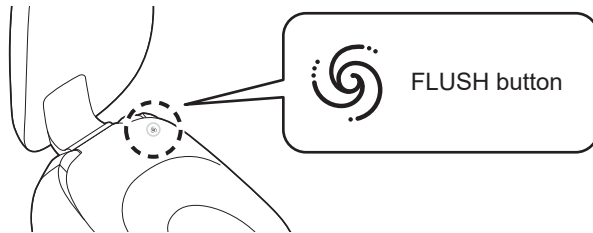
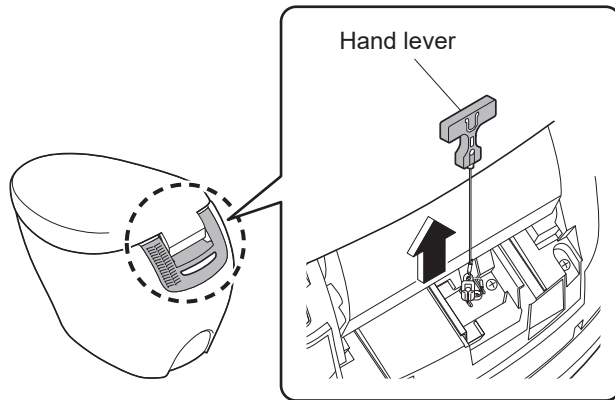


In the event of a power outage, you can flush the toilet bowl with the manual water supply cord (orange) and the manual water storage cord (white).

  With LS

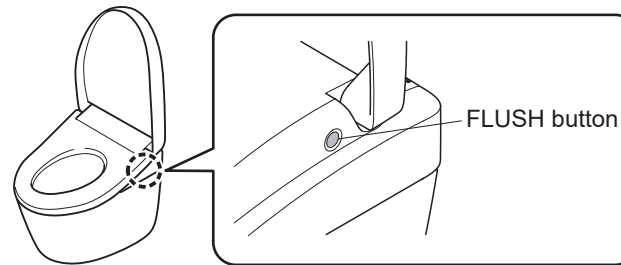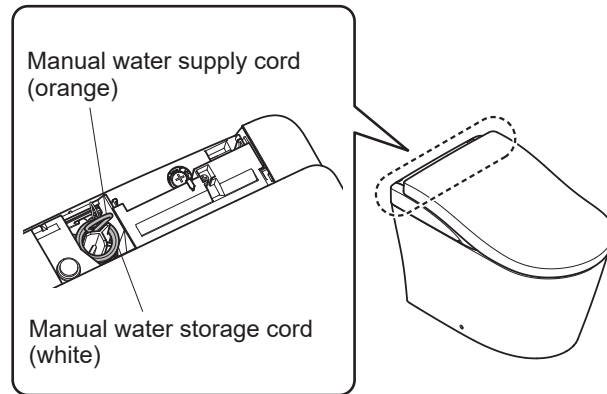

With AS/RS

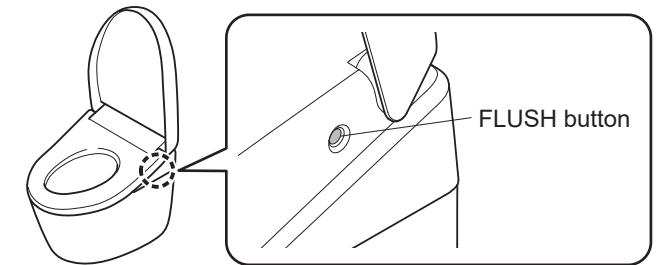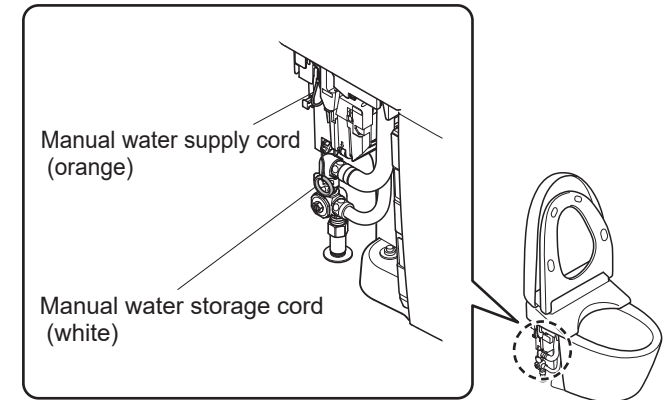  

The toilet bowl can also be flushed clean by the FLUSHING button.