

# Standard Use

◆“WASHLET” is a registered trademark of TOTO LTD.

 
Operate the controls on the remote control; a beep sounds when the top unit receives the signal.

## Washing

## Stopping

- Washes your rear.
- Washes your rear with soft embracing water flow.
- Serves as a bidet for ladies.
- Gently washes a wide area.
- The washing mode changes each time you press the button.

Stops rear washing and other operating functions.

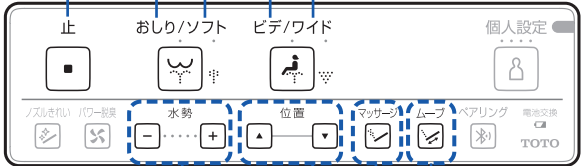

Functions that operate when a button is pressed during "Rear", "Rear soft", "Front" or "Wide front".

### Water pressure adjustment (5 levels)

- After you press the "Water pressure adjustment" button, the set position will light for 10 seconds.
- If you press a wash button (Rear, Rear soft, Front or Wide front), the lamp lights for about 10 seconds at the preset position.



### Oscillating washing

The wand moves back and forth to washes your rear thoroughly.

### Pulsating washing

Washes with the water pressure pulsating between soft and strong.

### Wand position adjustment (5 levels)

Once use of the remote control is finished, the settings will return to the initial setting (3rd position) after a while.

## Flushing

## Opening and closing

- Performs a full flush.
- Performs a light flush.
- Opens and closes the toilet seat.
- Opens and closes the toilet lid.



Low battery warning mark

### Wand CLEAN

Cleans the wand with electrolyzed water.

### Power deodorizer

Increase suction power and remove odor.

### Pairing

 
Used when setting up the "TOTO Wellness" app.

### Personal setting

Up to six people can register their preferred "Water pressure", "Wand position" and "Warm water temperature" settings.

#### ●To use

- Press the button to turn on the LED for the location of your setting.
- Press the wash button you want to use (Rear washing, etc.)

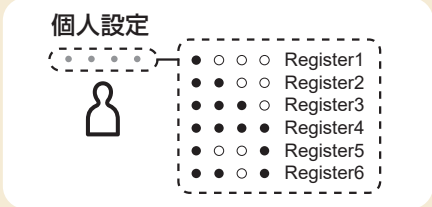


Also used to authenticate users for the feces scanning function.

More comfortable! More Energy saver!


# How to Use

 Remote control back side

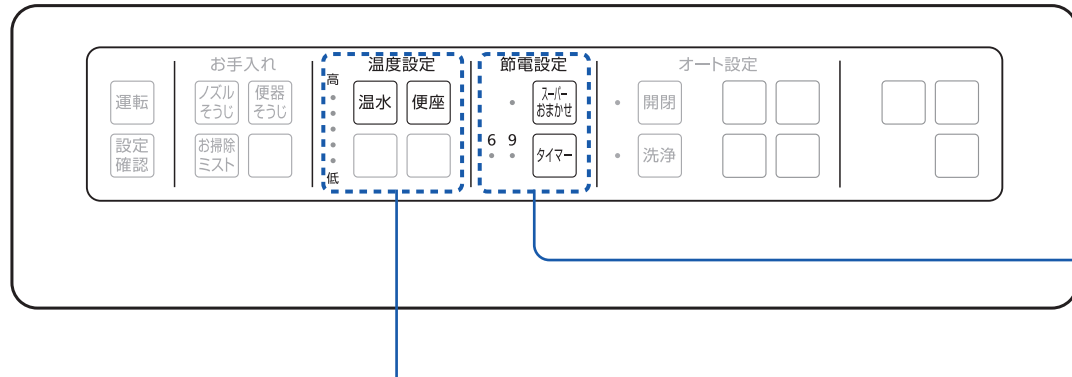


## Temperature Adjustment (5 levels)

 Displaying the temperature level of the pressed button

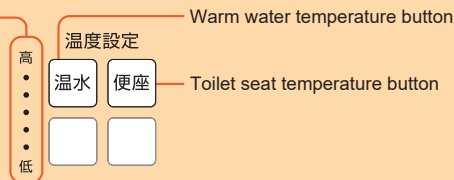

- 1 Choose and press the button of the temperature that you want to set.
- 2 Press the button selected in step 1 repeatedly until a desired temperature level illuminates.

The setting changes each time the button is pressed once

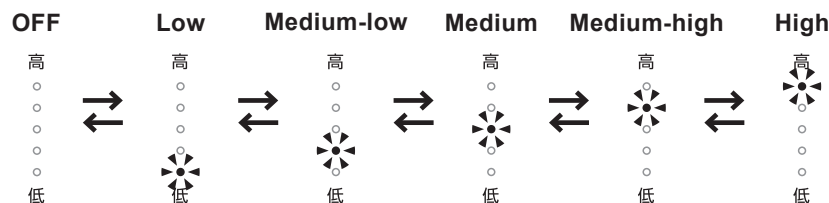

## Energy saver features


### Auto energy saver+

The WASHLET detects time periods when the toilet is not used and automatically turns off the toilet seat heater.

\*It takes about 10 days for the product to determine the periods when it is not used.

You can turn the feature ON/OFF at your discretion.

The setting changes each time the button is pressed once

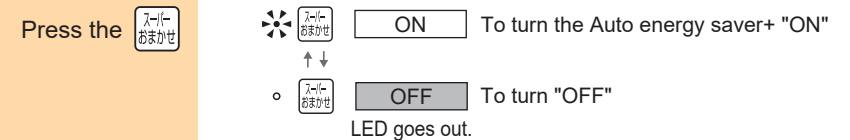


### Timer energy saver

Once the time is set, the toilet seat heater and other features turn off automatically during the set time period every day. (The energy-saving time period can be set to 6 or 9 hours.)

**Example** When using energy-saving function for 6 hours(1 am - 7 am).

When the time (1 am) you want to start energy saving function is reached, press the **タイマー** button repeatedly until the "6" LED lights up.

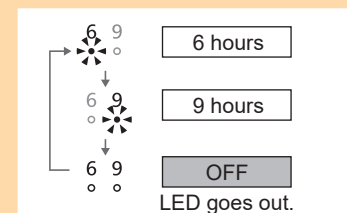

# What to Do?

If the water does not flow due to a power outage.

In the event of a power outage, you can flush the toilet bowl with the manual water supply cord (orange) and the manual water storage cord (white).  
The toilet bowl can also be flushed clean by the FLUSHING button.

