

Standard Use

Operate the controls on the remote control; a beep sounds when the top unit receives the signal.

◆"WASHLET" is a registered trademark of

Washing

Washes your rear with soft embracing water flow.


Serves as a bidet for ladies.

Washes your rear.

Gently washes a wide area.

Stopping

Stops rear washing and other operating functions.

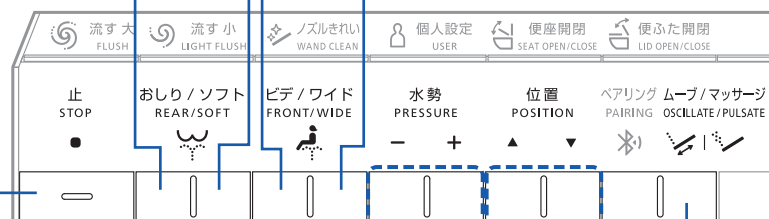

PRESSURE

You can adjust the water pressure to one of five levels. ("-": Softer, "+": Stronger)

POSITION

You can adjust the washing position to 5 different points between the front and the rear, using the "▲" and "▼" buttons.

*Once use of the remote control is finished, the settings will return to the initial setting (3rd position) after a while.

OSCILLATE

The wand moves back and forth to washes your rear thoroughly.

PULSATE

Washes with the water pressure pulsating between soft and strong.



*The washing mode changes each time you press the button.

Functions that operate when a button is pressed during "REAR", "SOFT", "FRONT" or "WIDE".

Flushing

Performs a full flush.

Performs a light flush.

Opening and closing

Opens and closes the toilet seat.

Opens and closes the toilet lid.

Low battery warning LED



WAND CLEAN

Cleans the wand with electrolyzed water.

Personal setting

Up to four people can register their preferred "Water pressure", "Wand position" and "Warm water temperature" settings.

To use

1. Press the button and select the registration number while checking the electronic sound.
2. Press the wash button you want to use (Rear washing, etc.)

- [REGISTER1] : One short beep
- [REGISTER2] : Two short beeps
- [REGISTER3] : Three short beeps
- [REGISTER4] : Four short beeps
- [REGISTER5] : Long beep and short beep
- [REGISTER6] : Long beep and two short beeps


Also used to authenticate users for the feces scanning function.

More comfortable! More Energy-Savings!

How to Use

List of menus that can be set by remote control.

Remoto control back side

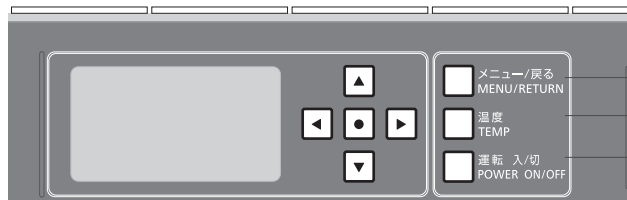

Menu / Return

Temperature


Used for temperature adjustment.

Power ON/OFF button

Press "Power ON/OFF" button about 3 seconds or longer.

How to set

1 Press メニュー/戻る MENU/RETURN

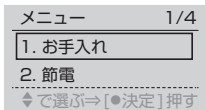

The display screen changes.

2 Set the item from the display screen.


When you move the buttons (Up/Down), the frame of the item moves.

When you move the buttons (Right/Left), you can select "Enter".

When you press the button, the item is entered.

*The display goes out when no button on the remote control is pressed for about 60 sec or more.

Number of menus on the display screen.

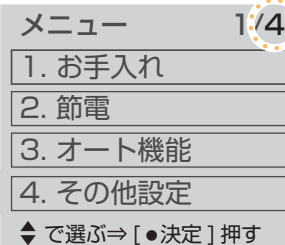

If you want to return to the previous item, press the メニュー/戻る MENU/RETURN button.

1st Stage

お手入れ 1/3

1. 便器そうじ開始 / 停止
2. ノズルそうじ開始 / 停止
3. お掃除ミスト

節電 1/2

1. スーパーおまかせ節電
2. タイマー節電

オート機能 1/4

1. オート便器洗浄
2. オートふたの開閉
3. せいけつ
4. ライト

その他設定 1/9

1. 水面下げる
2. 凍結防止
3. 電子音
4. 水勢洗浄位置記憶
5. 便器洗浄水量 6Lモード
6. 便器洗浄水量 8Lモード
7. 個人設定
8. センサー検知距離
9. ペアリング初期化

2nd Stage

タイマー節電 1/1

1. 節電時間

オート便器洗浄 1/3

1. オート設定
2. 便ふた閉止後洗浄モード
3. 水が流れるまで

オートふたの開閉 1/4

1. オート設定
2. ふたが閉まるまで
3. ふたが開くまで
4. 開きかた

せいけつ 1/5

1. ノズルきれい
2. 便器きれい
3. プレ脱臭
4. 脱臭
5. オートパワー脱臭

ライト 1/3

1. やわらかライト
2. 便器内LED
3. きれいサイン

個人設定 1/7


1. 設定
2. 登録1
3. 登録2
4. 登録3
5. 登録4
6. 登録5
7. 登録6

What to Do?


If the water does not flow due to a power outage.

In the event of a power outage, you can flush the toilet bowl with the manual water supply cord (orange) and the manual water storage cord (white).

With LS-W

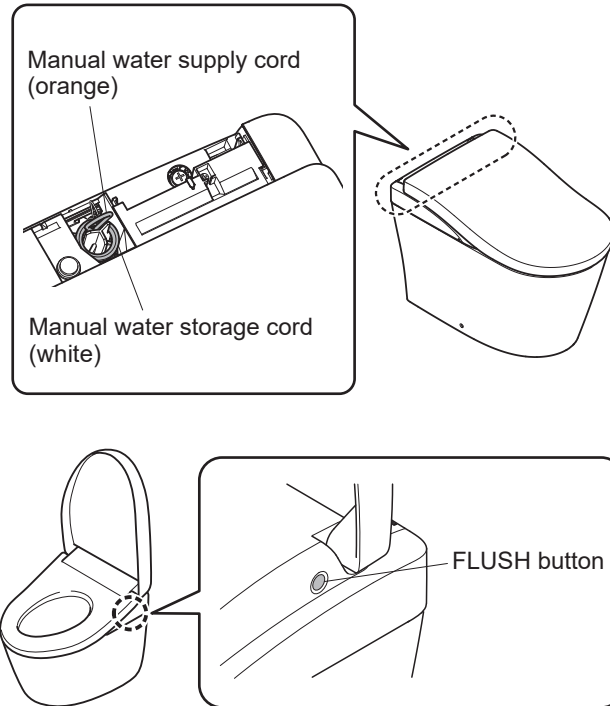

With AS-W

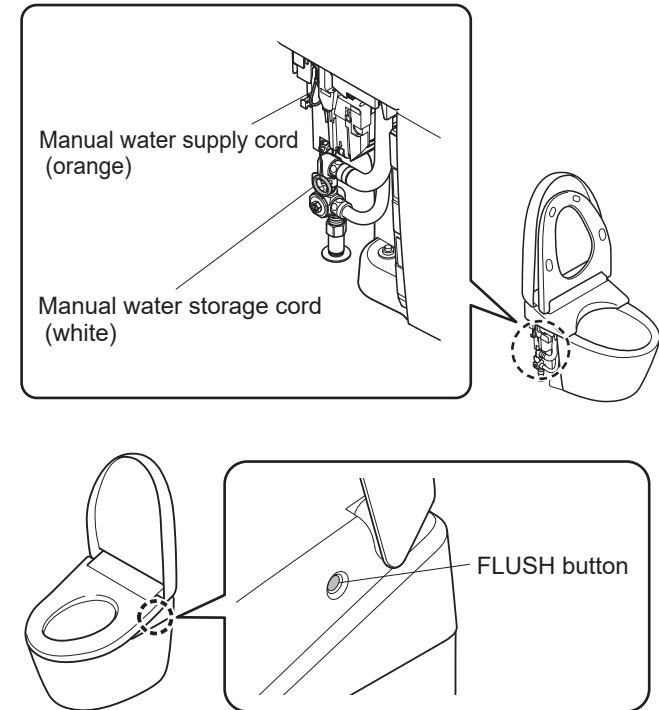

The toilet bowl can also be flushed clean by the FLUSHING button.