Essential Points of Use!
Standard Use

WASHLET® **TOTO**

◆"Washlet"is a registered trademark of TOTO.

Press a button on the Washlet control panel; a beep sounds when the main unit receives the signal.

STOP

止

Stops rear washing and other operating functions.

WASH

おしり

Washing the rear.

やわらか

For washing rear using mild water pressure.

ビデ

Serves as a bidet for ladies.

OSCILLATING

• If you press the button again during use, the wand moves back and forth so that you can wash your rear thoroughly.
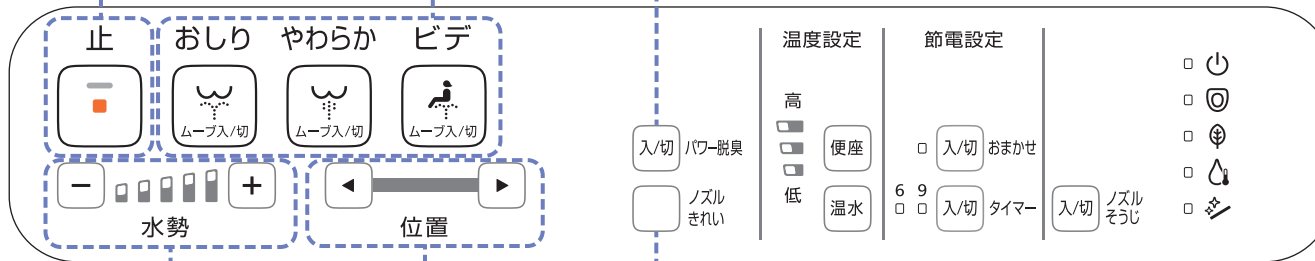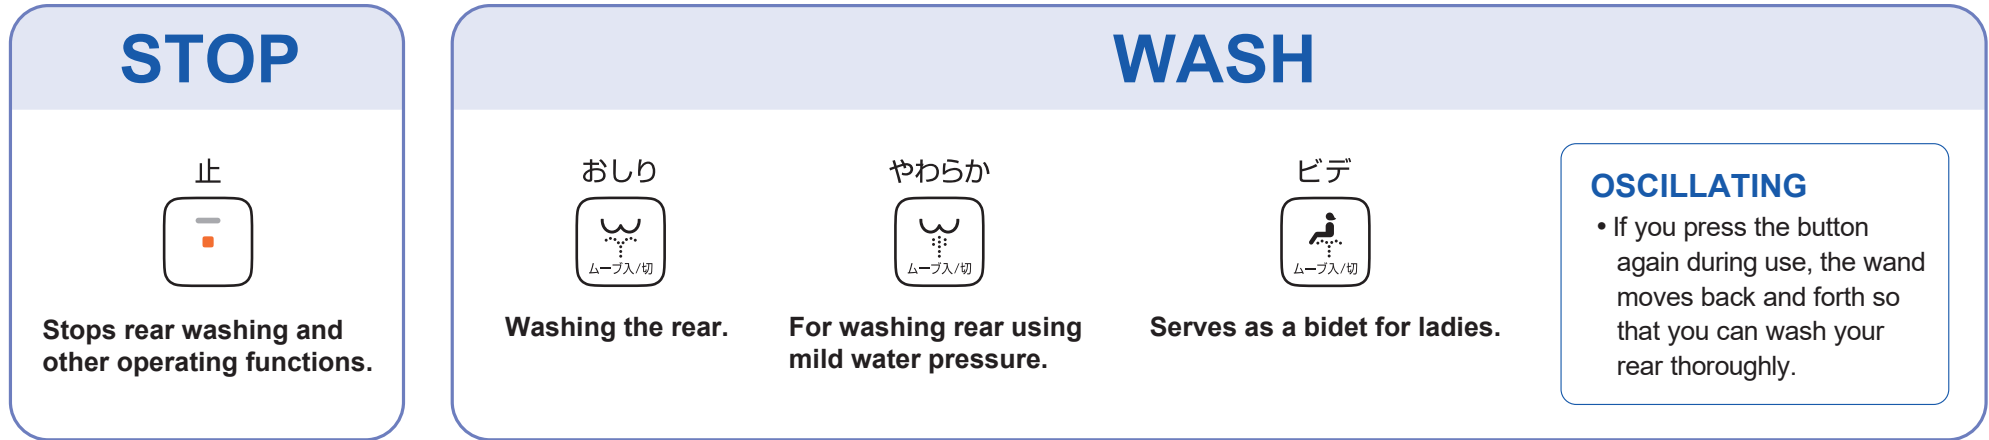
POWER DEODORIZER

• Increases air suction power for powerful deodorization.

止　おしり　やわらか　ビデ

水勢　位置

入/切　パワー脱臭
ノズルきれい

温度設定
高　低

便座　温水

節電設定
入/切　おまかせ
6 9
入/切　タイマー

入/切　ノズルそうじ

● The function that can be used when you press the "REAR", "SOFT REAR" or "BIDET" button during use.

WATER PRESSURE ADJUSTMENT (5 steps.)

• The PRESSURE LEDs lights up when you sit on the toilet seat.

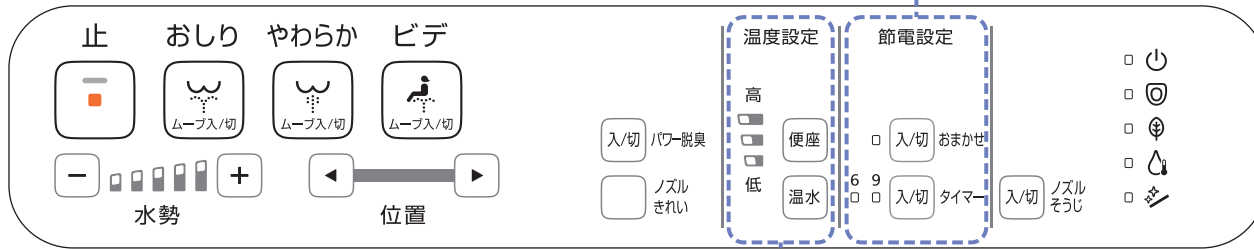### WASH POSITION ADJUSTMENT (5 steps.)

• The washing position returns to the standard position (3 steps.) when you stand up from the toilet seat.

AUTO WAND CLEANING

• The wand is cleaned with clean sterilized water.

2021. 1. 14

How to Use

Energy-Saving Features

AUTO ENERGY-SAVING FUNCTION

The Washlet memorizes the time slot when the toilet is used less frequently and lowers the toilet seat temperature automatically to save energy.

※**It takes approximately 10 days to determine the time slot where the toilet is used less frequently.**

You can turn the feature ON/OFF at your discretion.

Press the [入/切] おまかせ

[入/切] おまかせ   ON   To turn the auto energy-saving function "ON"

↑ ↓

[入/切] おまかせ   OFF   To turn "OFF"
LED goes out.

ENERGY-SAVING TIMER

Once set, the toilet seat heater turns off everyday at that time to save energy. (The energy-saving time period can be set to 6 or 9 hours.)

Example   **When using energy-saving function for 6 hours(1:00 - 7:00am).**

When the time (1:00 am) you want to start energy saving function is reached,

press the [入/切] タイマー button repeatedly until the "6" LED lights up.

6 9 [入/切] タイマー

Setting completed

6 9 [入/切] タイマー   6 hours

6 9 [入/切] タイマー   9 hours

6 9 [入/切] タイマー   OFF
LED goes out.

Control panel labels:

止   おしり   やわらか   ビデ
ムーブ入/切   ムーブ入/切   ムーブ入/切
−   ＋   水勢   ◀   ▶   位置

入/切 パワー脱臭
ノズル きれい

温度設定
高
低
便座
温水

節電設定
入/切 おまかせ
6 9
入/切 タイマー

入/切 ノズル そうじ

Temperature Adjustment

Temperature can be changed to "Warm Water" and "Toilet Seat".

Displaying the temperature level of the pressed button

温度設定
高
低

便座 — Toilet seat temperature adjusument button
温水 — Warm water temperature adjustment button

❶ [便座] [温水]

Press the button of the temperature you want to change.

❷ Press the button selected in step ❶ repeatedly until a desired temperature level lights up.

高 → 高 → 高 → 高
低   低   低   低

OFF   LOW   MEDIUM   HIGH

LED goes out.